


Door Locks

Locking the vehicle from inside

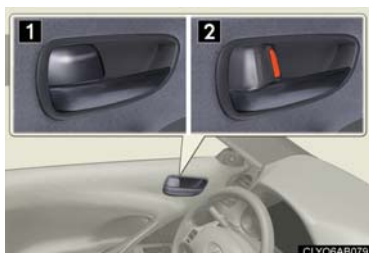

► Inside lock button

- 1 Locks
- 2 Unlocks



► Door lock switch


Operates all door locks.

- 1 Locks
- 2 Unlocks

Locking the vehicle from outside

Use the entry function or wireless remote control (→P.7, 8)

Rear door child-protector lock

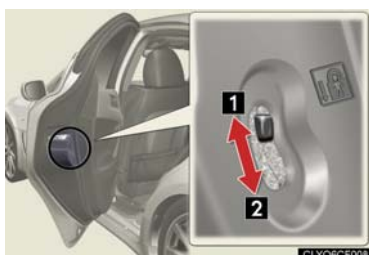


Pushing down the switch prevents the rear doors from being opened from the inside.

- 1 Unlock
- 2 Lock

Always set the child protector locks when children are seated in the rear seat.

Power Windows

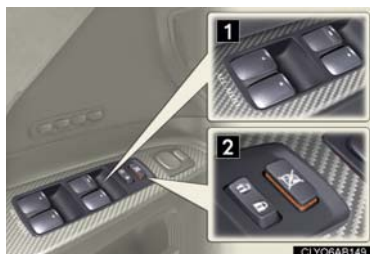

1 Power window switches

To open: press the switch.

To close: pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of passenger window switches.

Moon Roof (If Equipped)

Opening and closing

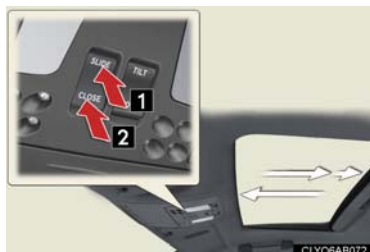

1 Open

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Close

Tilting up and down



1 Tilt up

2 Tilt down

Fuel Tank Cap



- 1 Press the fuel filler door opener.



- 2 Slowly remove the cap by turning it counter-clockwise.
After the cap is removed, it can be hung on the inside of the fuel filler door.

Trunk



► Trunk opener

To open the trunk from inside the cabin, simply press the trunk opener.



To disable the trunk opener, turn off the main switch in the glove box.

1 On

2 Off

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

► Entry function and wireless remote control (→P.7, 8)